 


LAUNCH RAMP INSTRUCTIONS

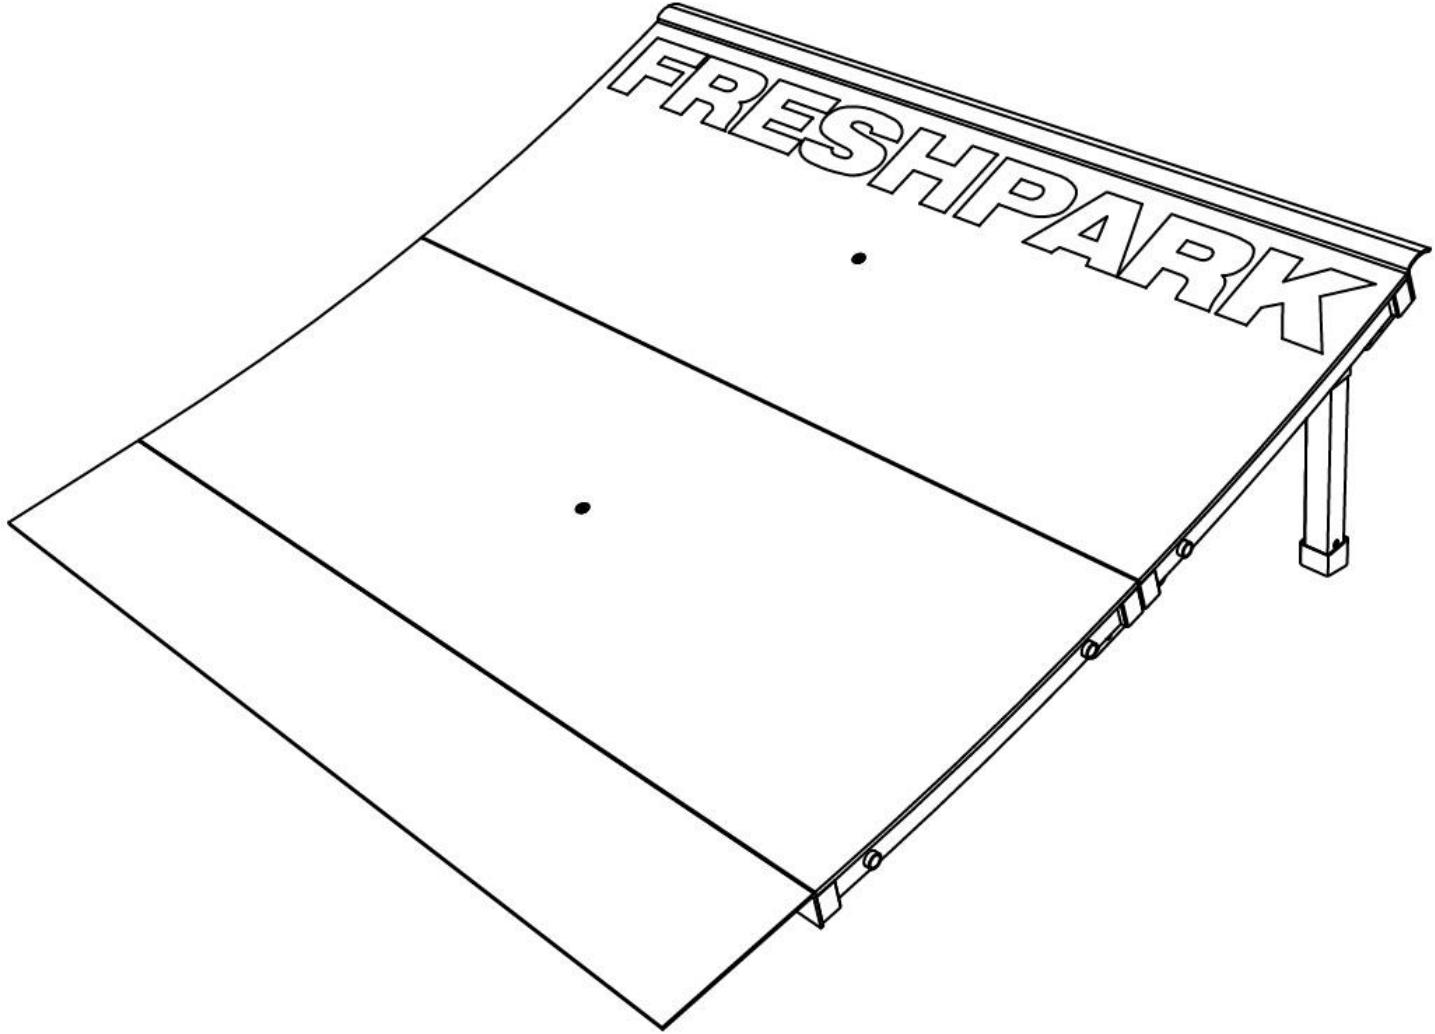 


ATTACHING PANELS

STEP 1

Align the two panels with the hinges together

Align the panels so the edges of panels are flush with each other

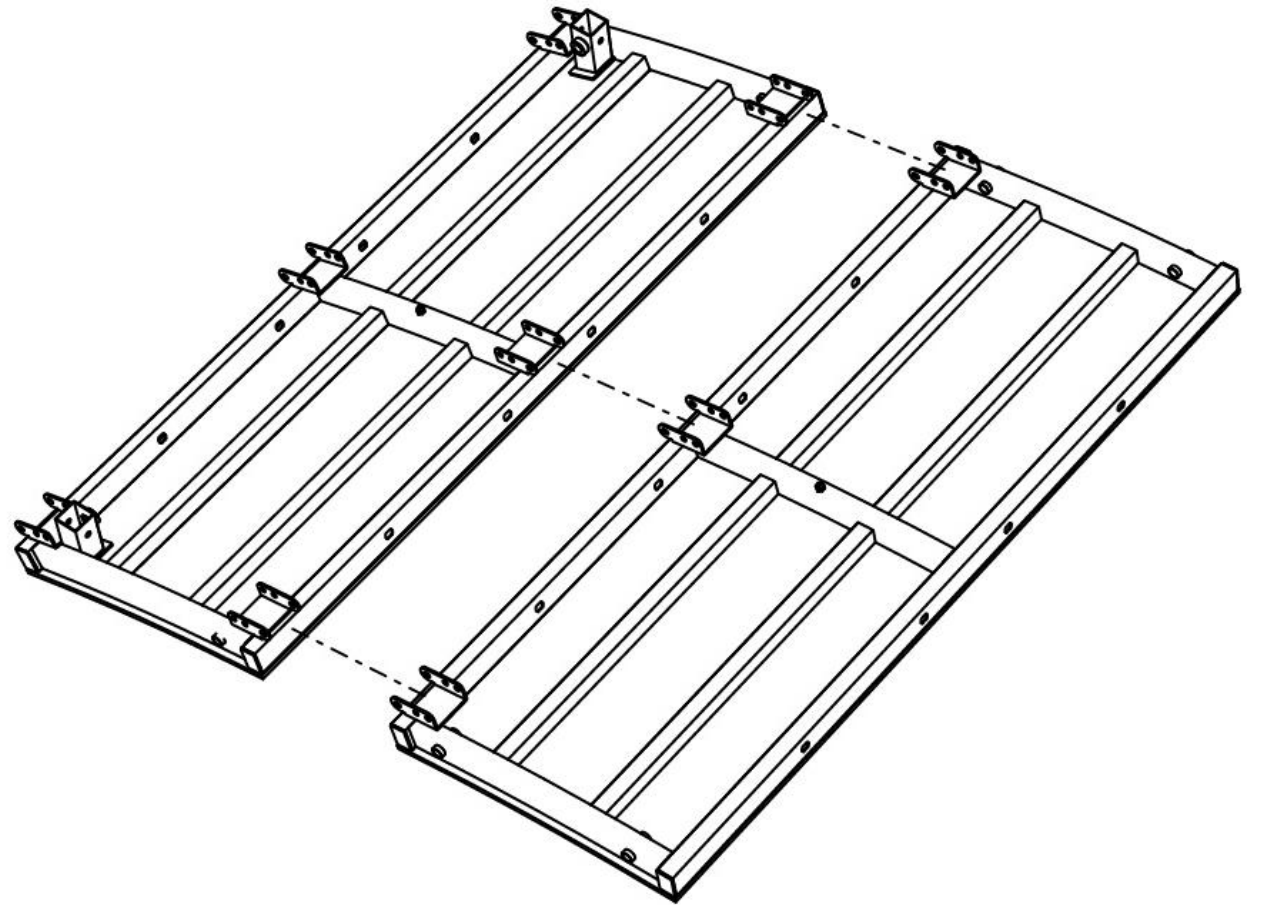

ATTACHING PANELS

STEP 2

 
Bolt together the panels using the 3" bolts provided on the 3 hinges

Place a small washer on the 3" bolt and insert it through both hinges

Follow it with a small washer and a lock nut to tighten the hinges together

Caution:

Do not tighten the bolts too tight to allow the hinges to freely move

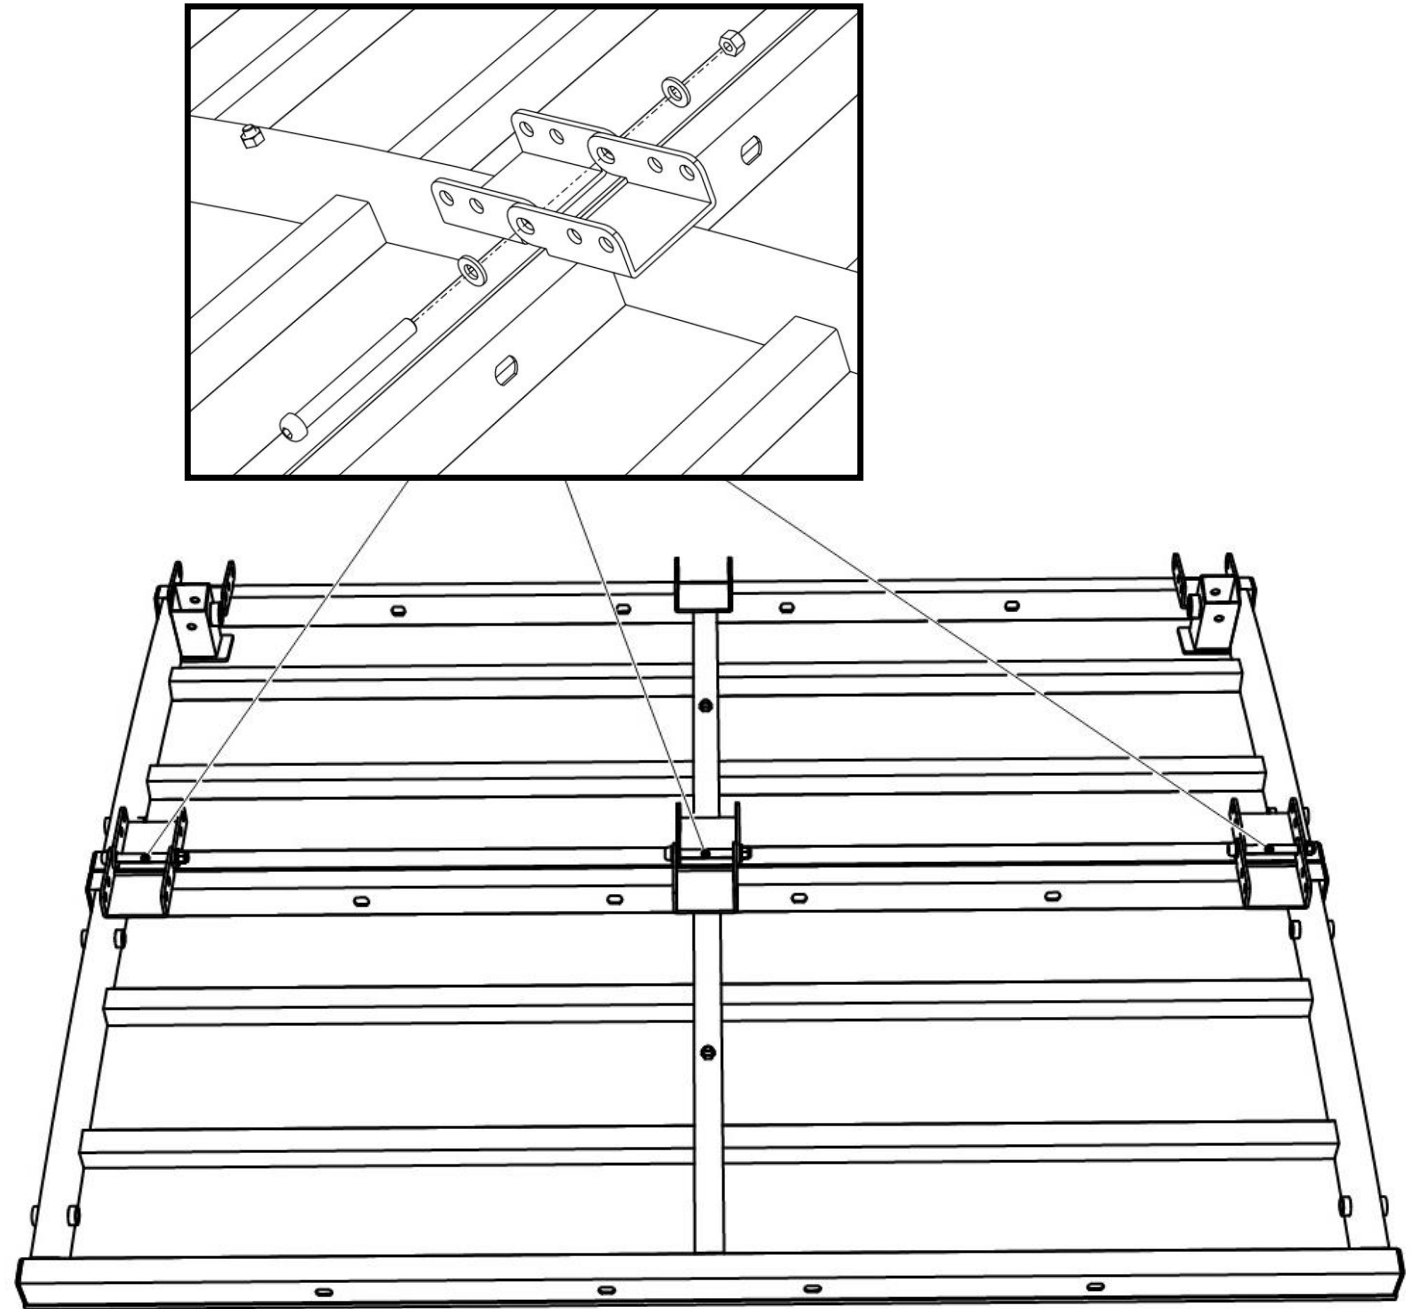


TOE PIECE

STEP 3

Place the toe piece on the bottom panel with only 3 hinges

 Align the 4 holes in the coping with the 4 holes in the tubing of the panel

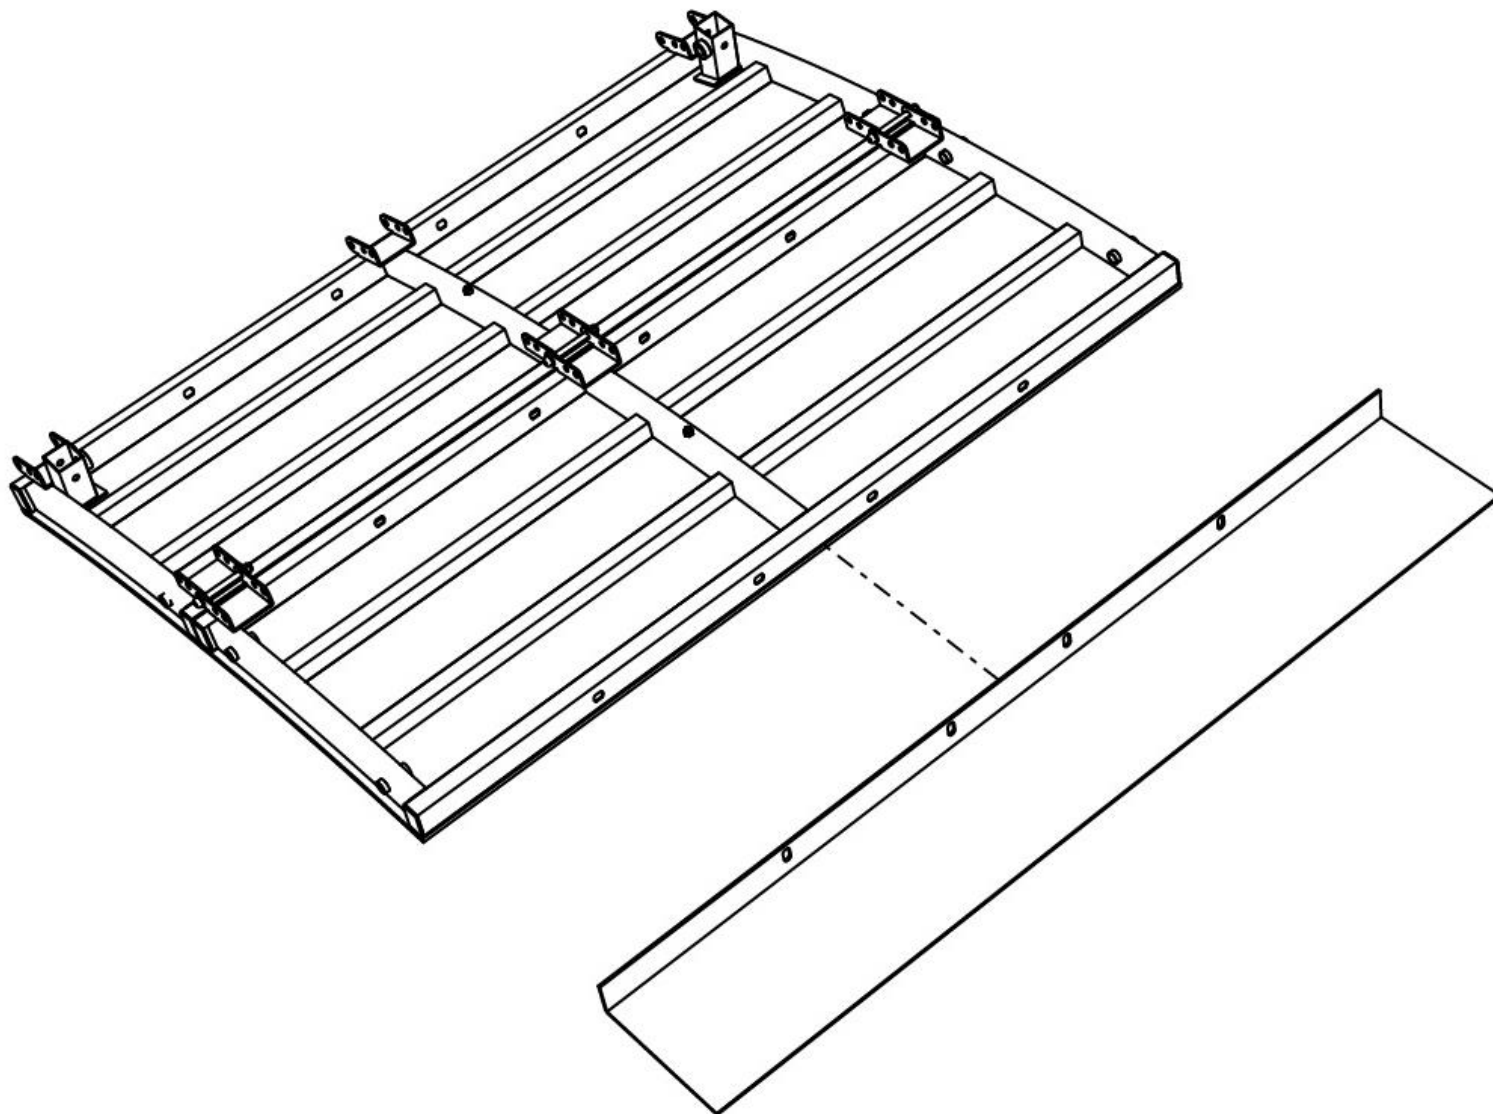



TOE PIECE

STEP 4

Use the 2" bolts to attach the toe piece to the launch ramp

Place a big washer onto the 2" bolt and insert it through the toe piece and tubing

  Follow it with a big washer and a lock nut to tighten the toe piece to the launch ramp

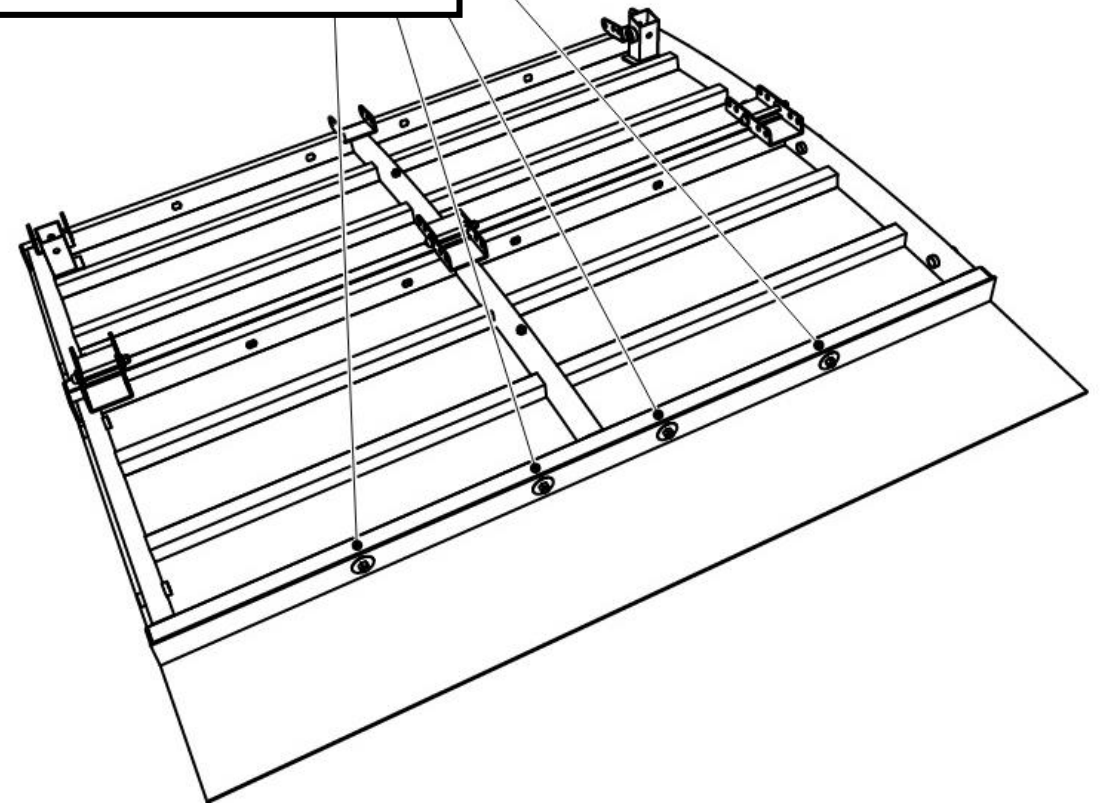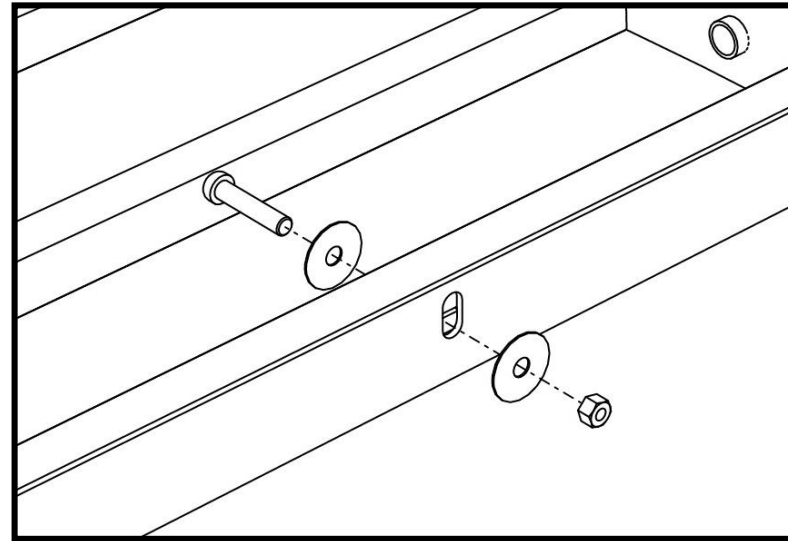


COPING

STEP 5

Place the coping on top panel of the launch ramp with the receivers

 Align the 4 holes in the coping with the 4 holes in the tubing of the panel

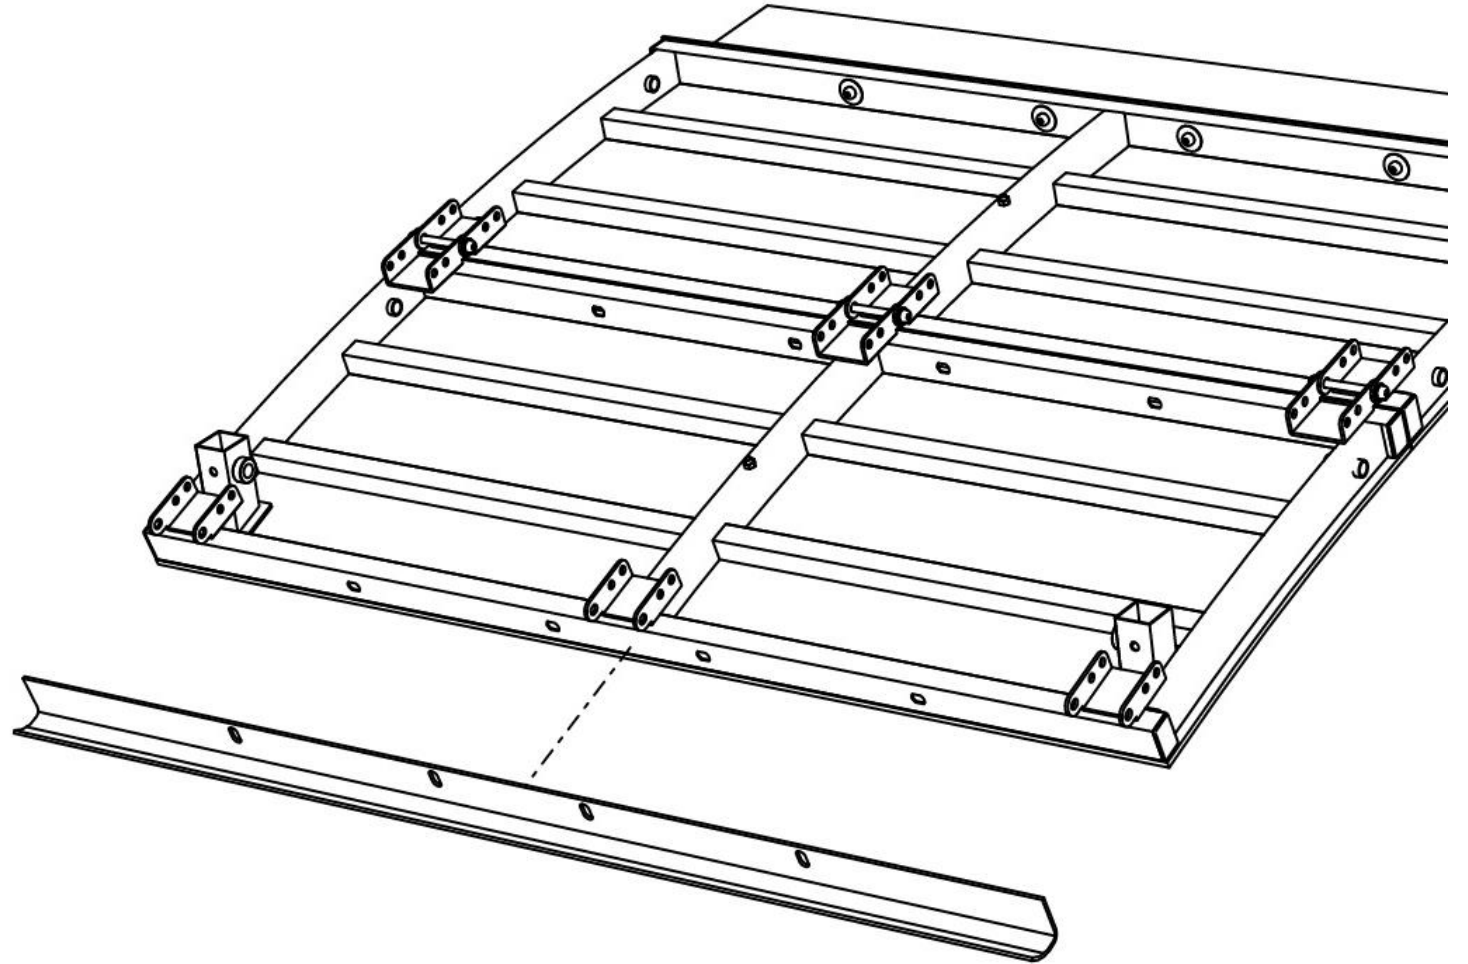



COPING

STEP 6

Use the 2" bolts to attach the coping to the launch ramp

Place a big washer onto the 2" bolt and insert it through the tubing and coping

  Follow it with a big washer and a lock nut to tighten the coping to the launch ramp

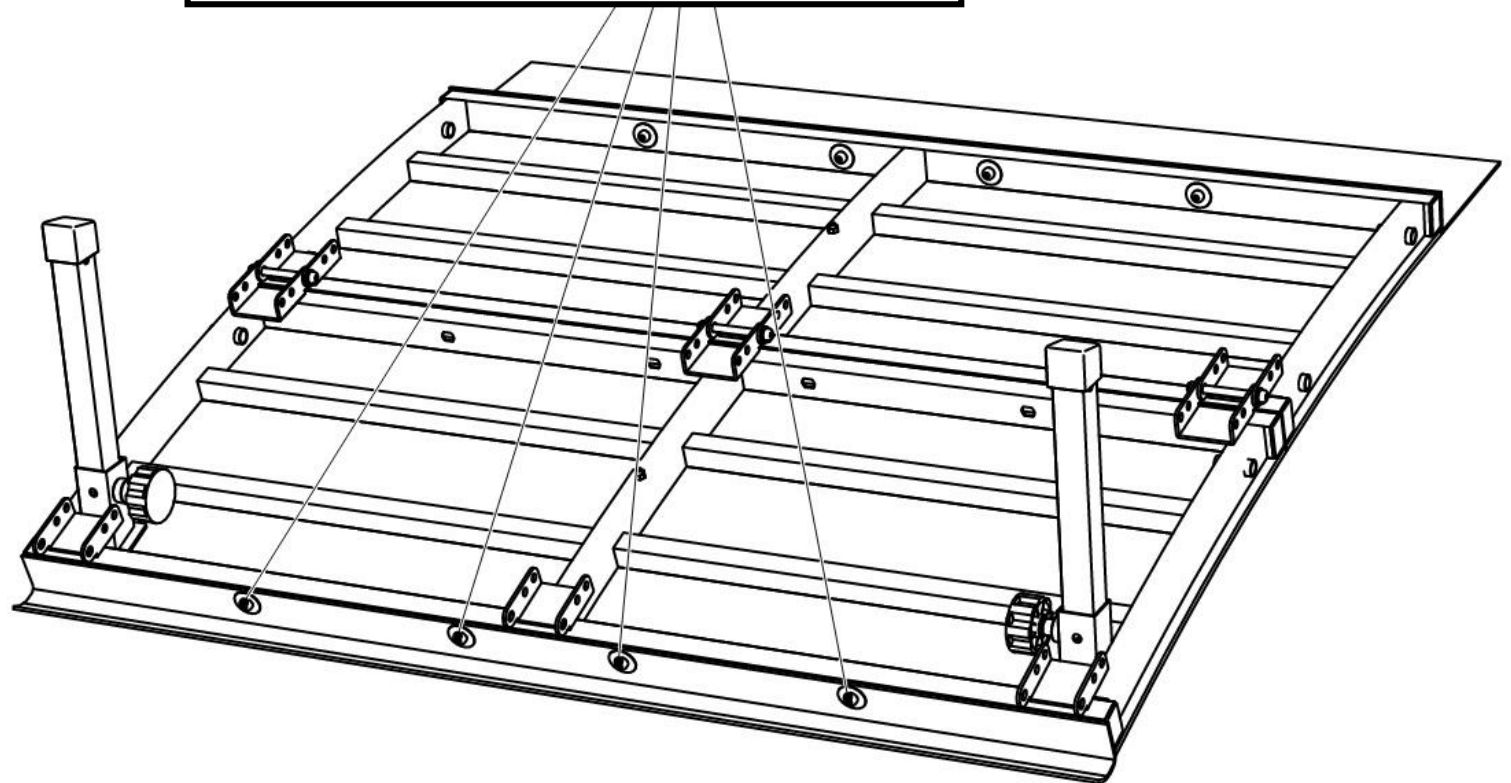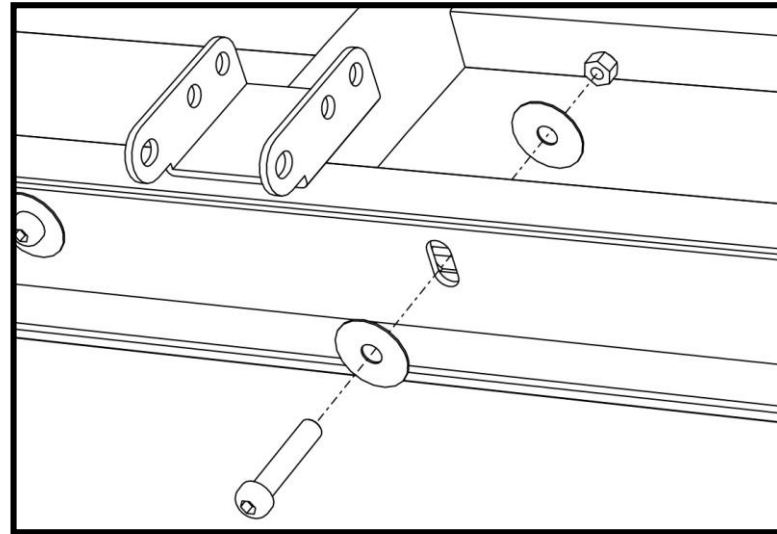


INSERTING LEGS

STEP 7

Insert the legs into receivers matching the angle of the legs with the ramp


STEP 8

 Tighten the legs down with the two knobs by screwing them into the threads of the receivers

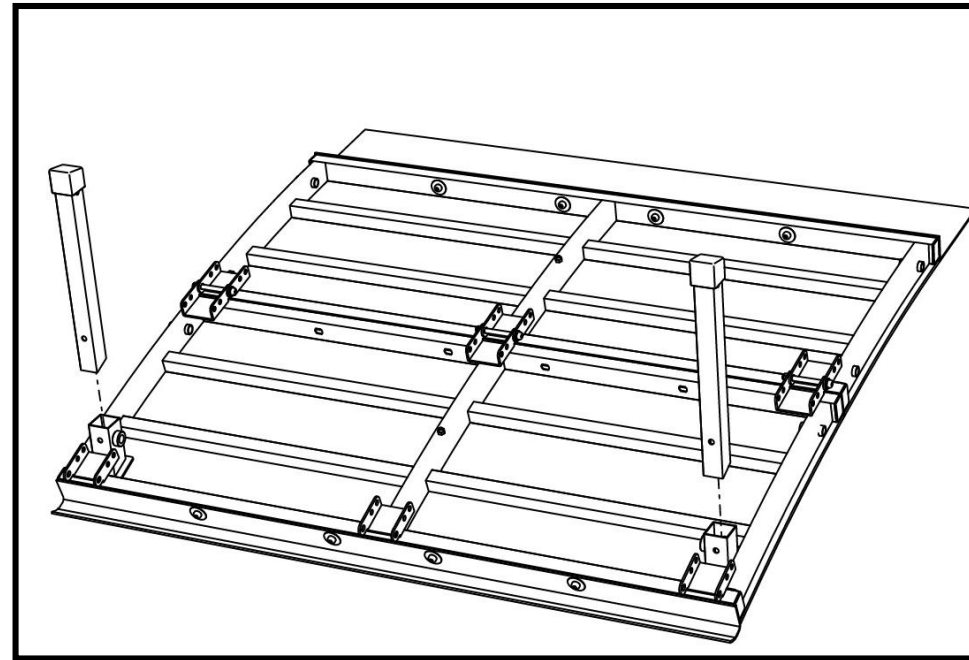


STEP 7

 STEP 8

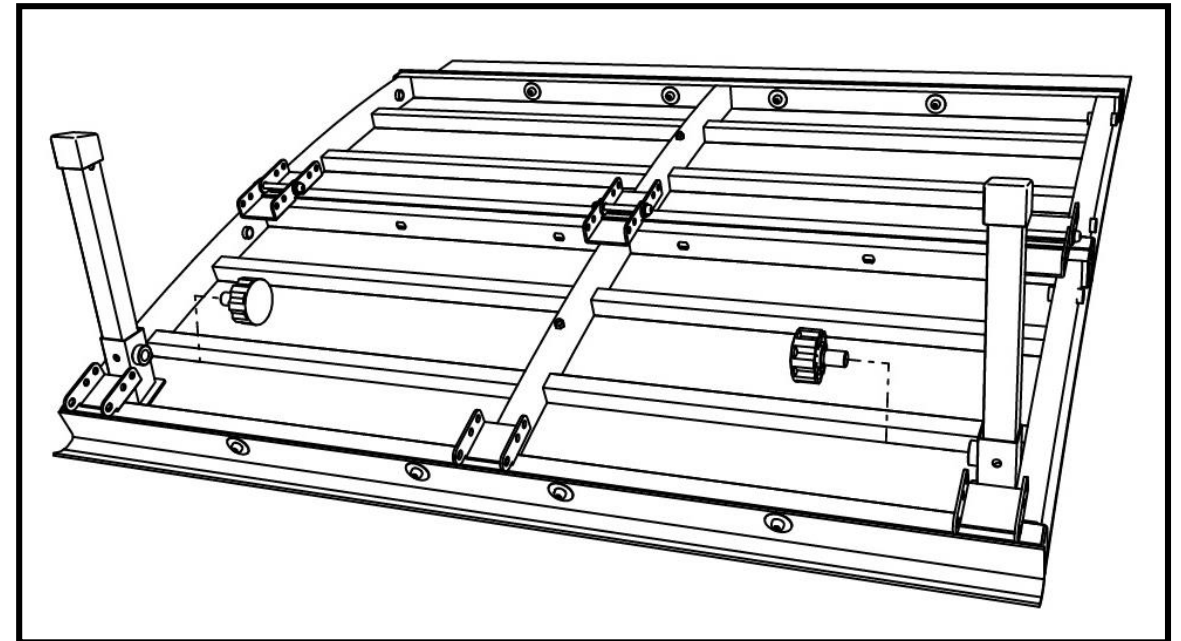

FUNBOX INSTRUCTIONS

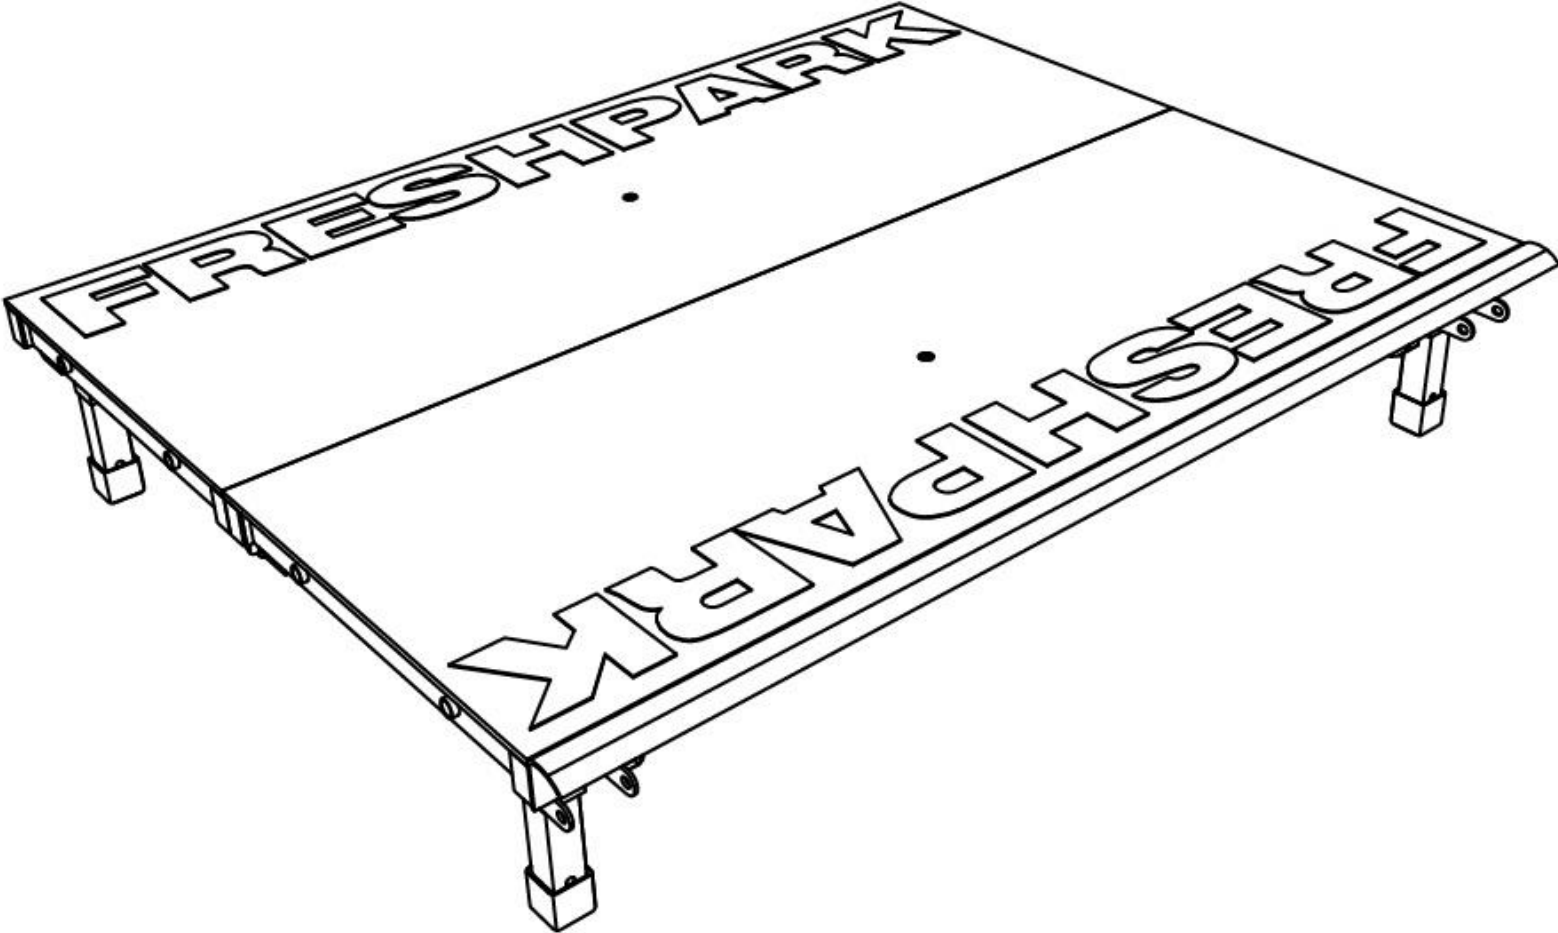 


ALIGNING PANELS

STEP 1

Align the two panels with the hinges together

 Align the panels so the edges of panels are flush with each other

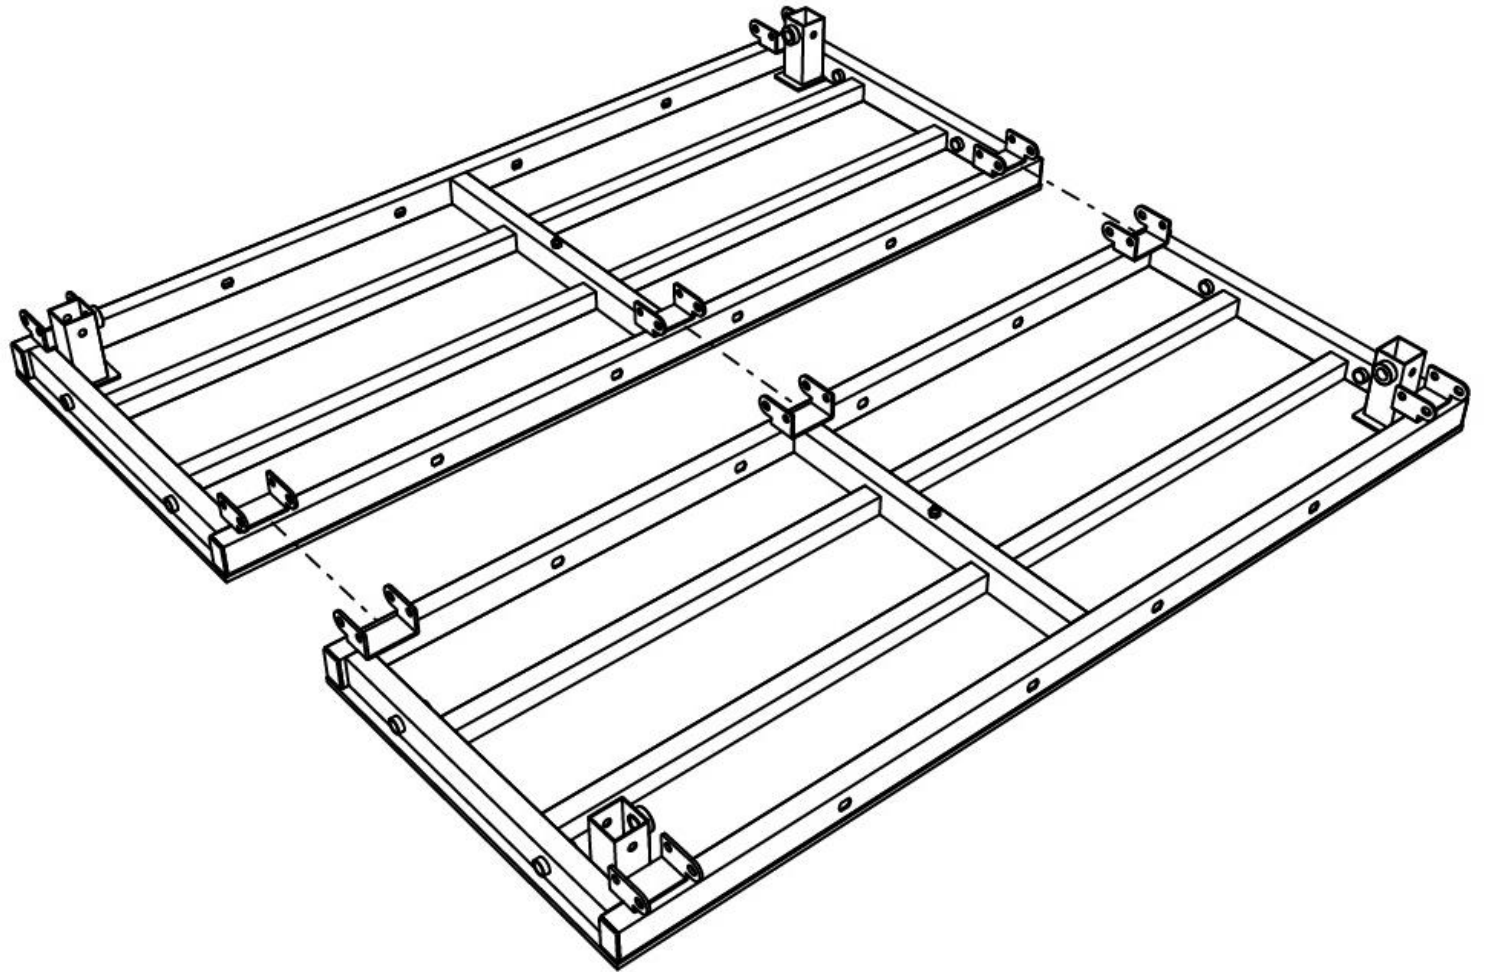

BOLTING HINGES

STEP 2

 
Bolt together the panels using the 3" bolts provided on the 3 hinges

Place a small washer on the 3" bolt and insert it through both hinges

Follow it with a small washer and a lock nut to tighten the hinges together

Caution:

Do not tighten the bolts too tight to allow the hinges to freely move

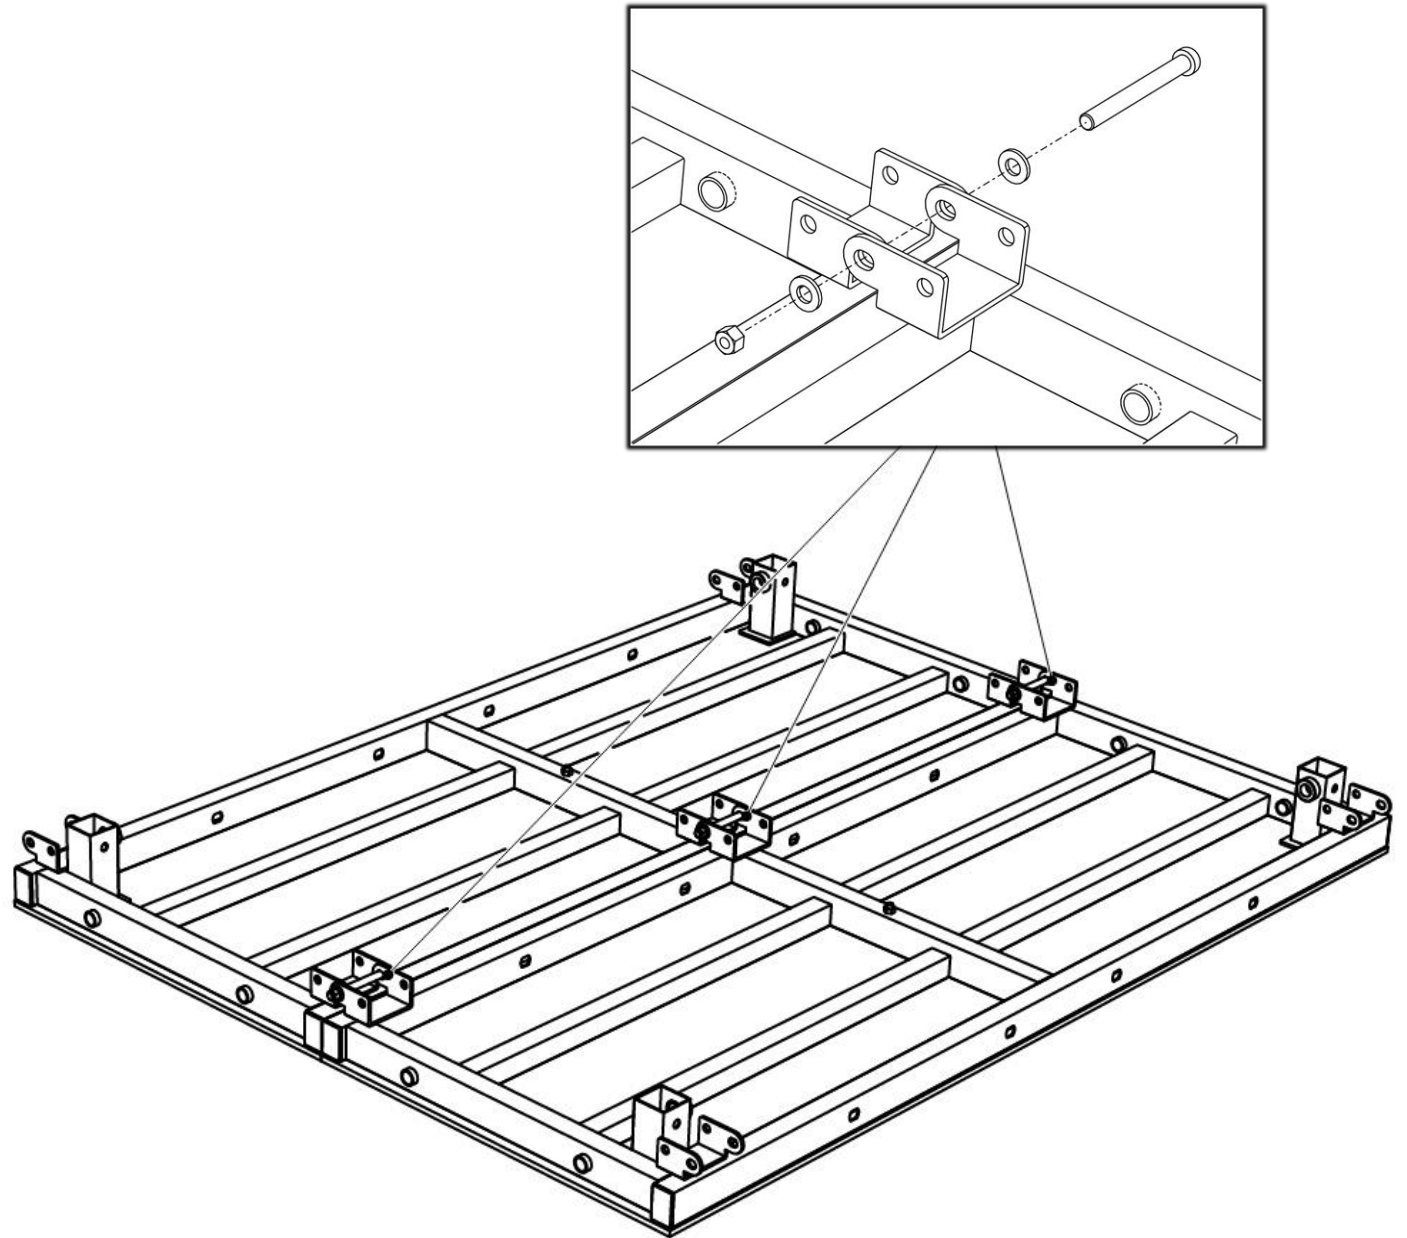

ATTACHING COPING

STEP 3

Place the coping on the flat side of the funbox so the curved piece will be on the top of the ramp as shown

Align the 4 holes in the coping with the 4 holes in the tubing of the panel

 
STEP 4

Use the 2" bolts to attach the coping to the funbox


Place a big washer onto the 2" bolt and insert it through the tubing and coping

Follow it with a big washer and a lock nut to tighten the coping to the funbox

STEP 3

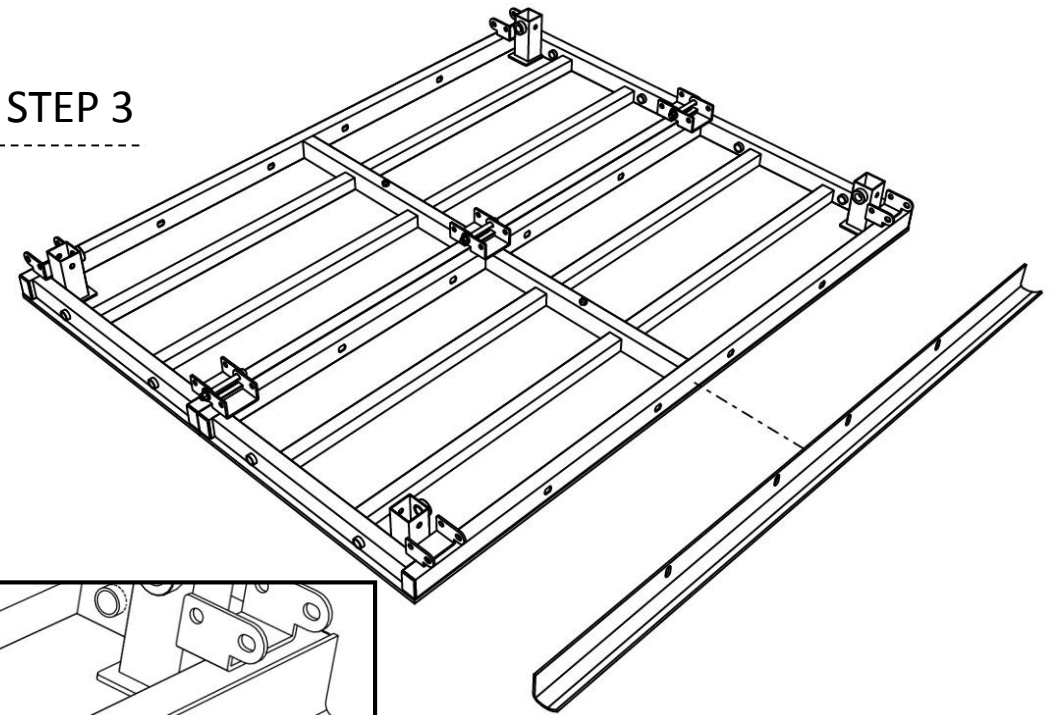

 STEP 4

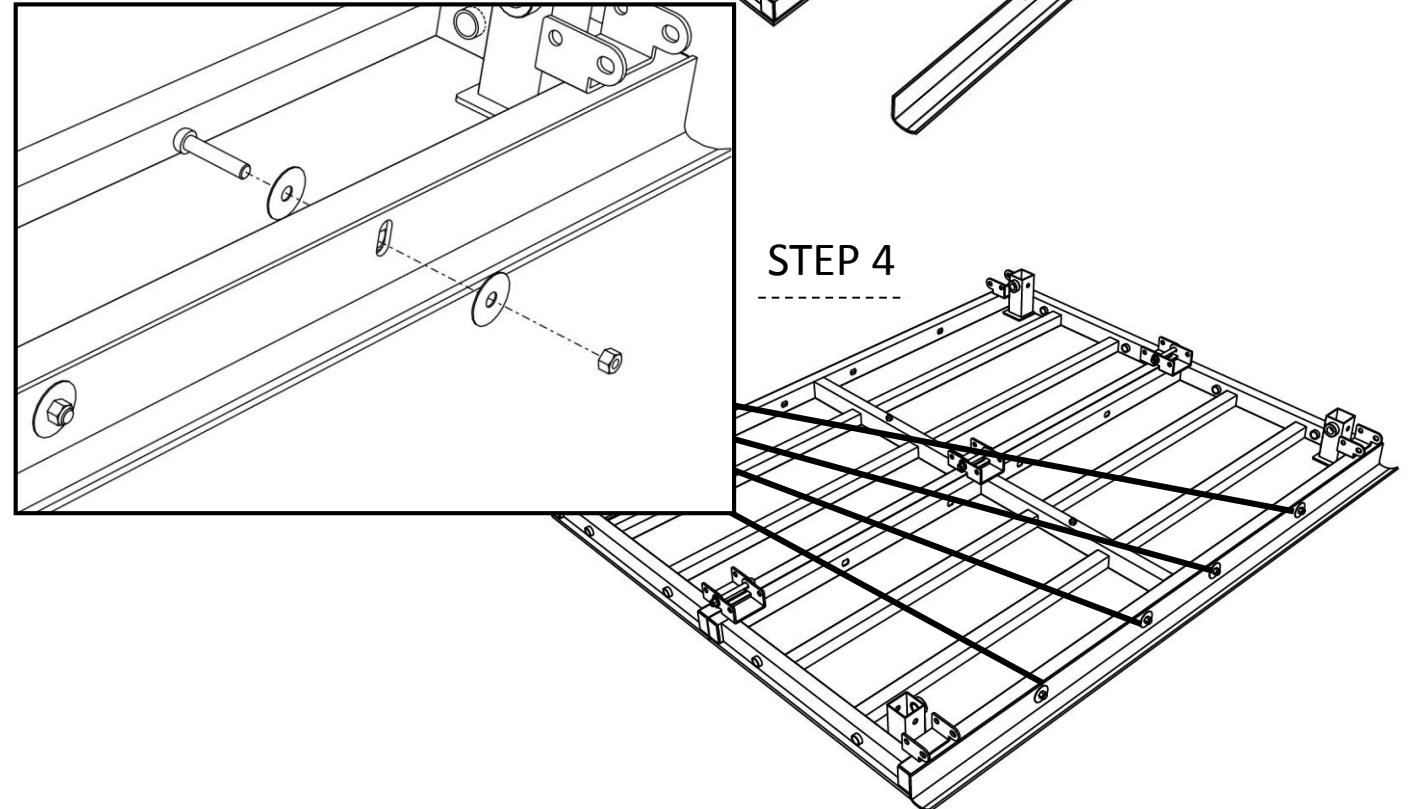

INSERTING LEGS

 
 
STEP 5

Insert the desired height legs you want to use into the 4 receivers of the funbox


STEP 6

Use the 4 knobs provided to screw into the receivers to lock the legs into place

Flip the funbox over onto its legs when they are secure

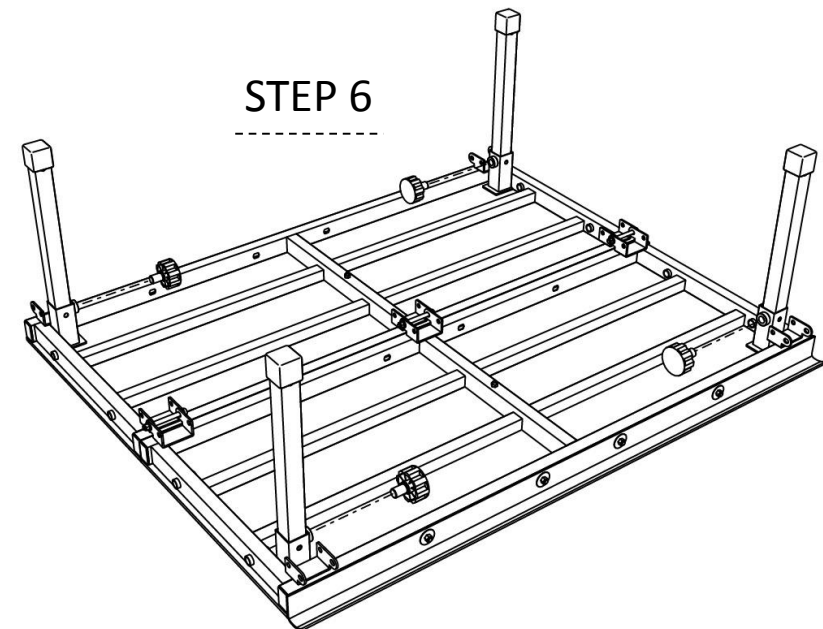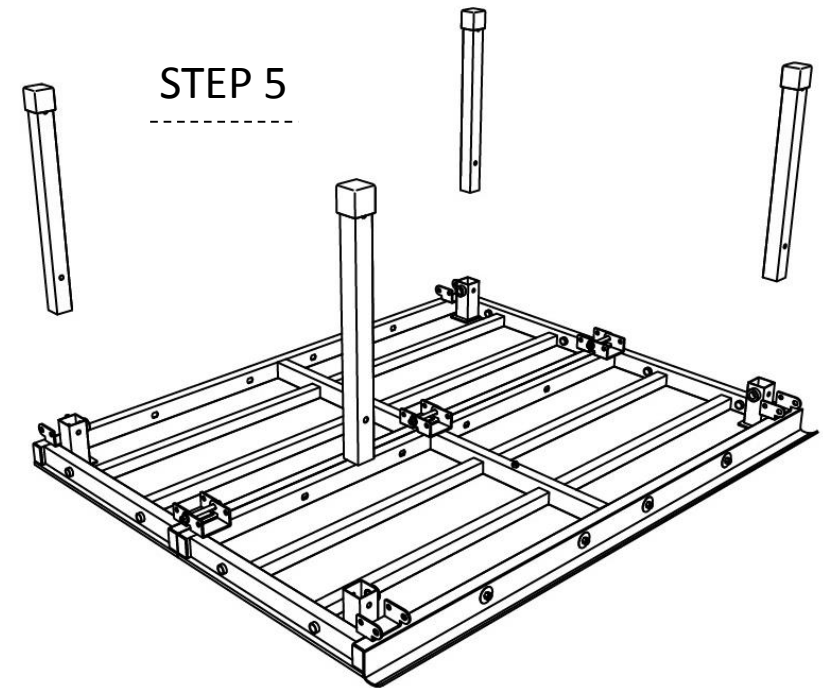

LINKING FUNBOX WITH LAUNCH RAMP

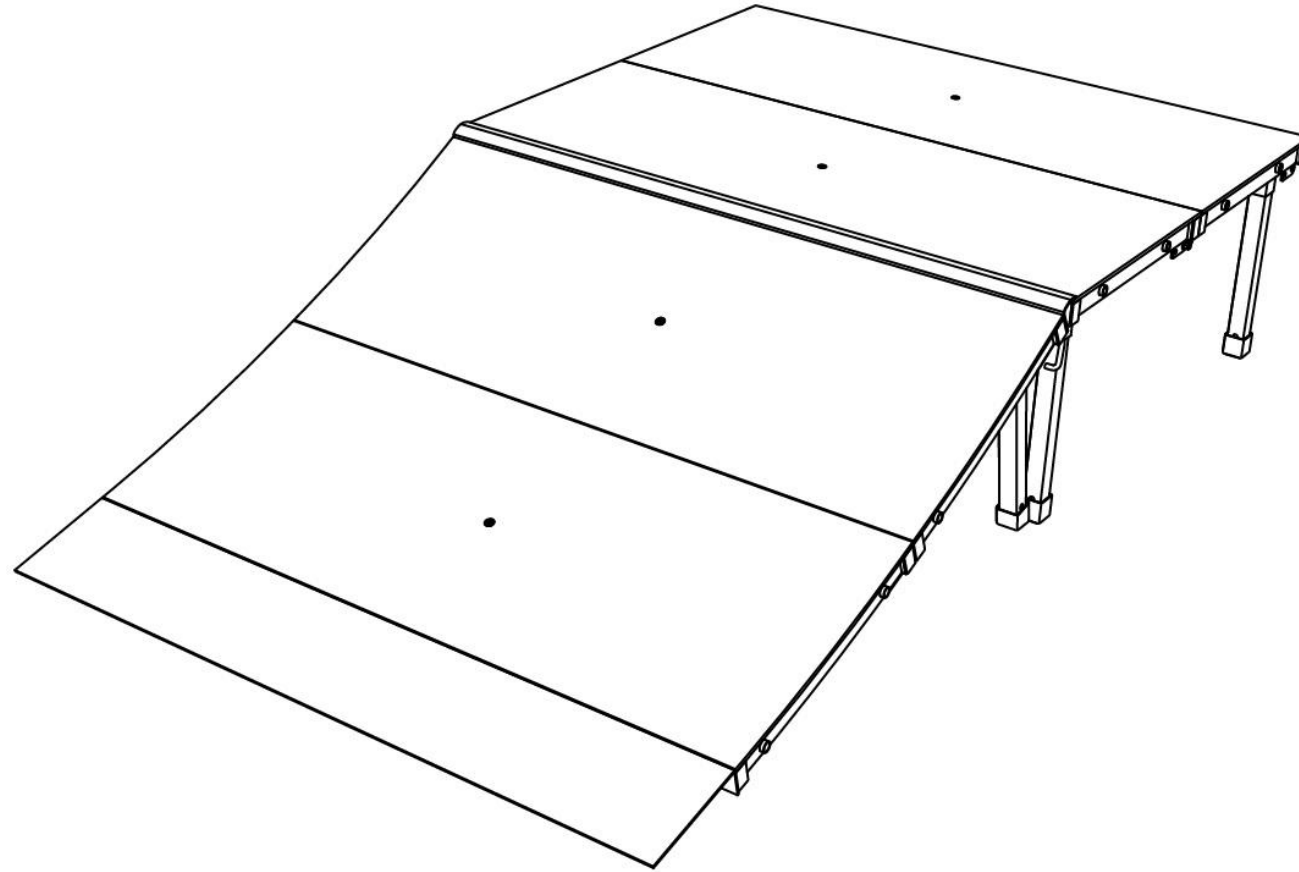 

ALIGNING RAMPS

 
STEP 1

Align the two ramps together so the hinges are facing each other

Bring them together so the hinges on each side meet

Align the hinges so the sides of the ramp are flush with each other

Place the coping of the launch ramp onto the coping of the funbox or align the launch ramps coping so it is flush with the top of the funbox


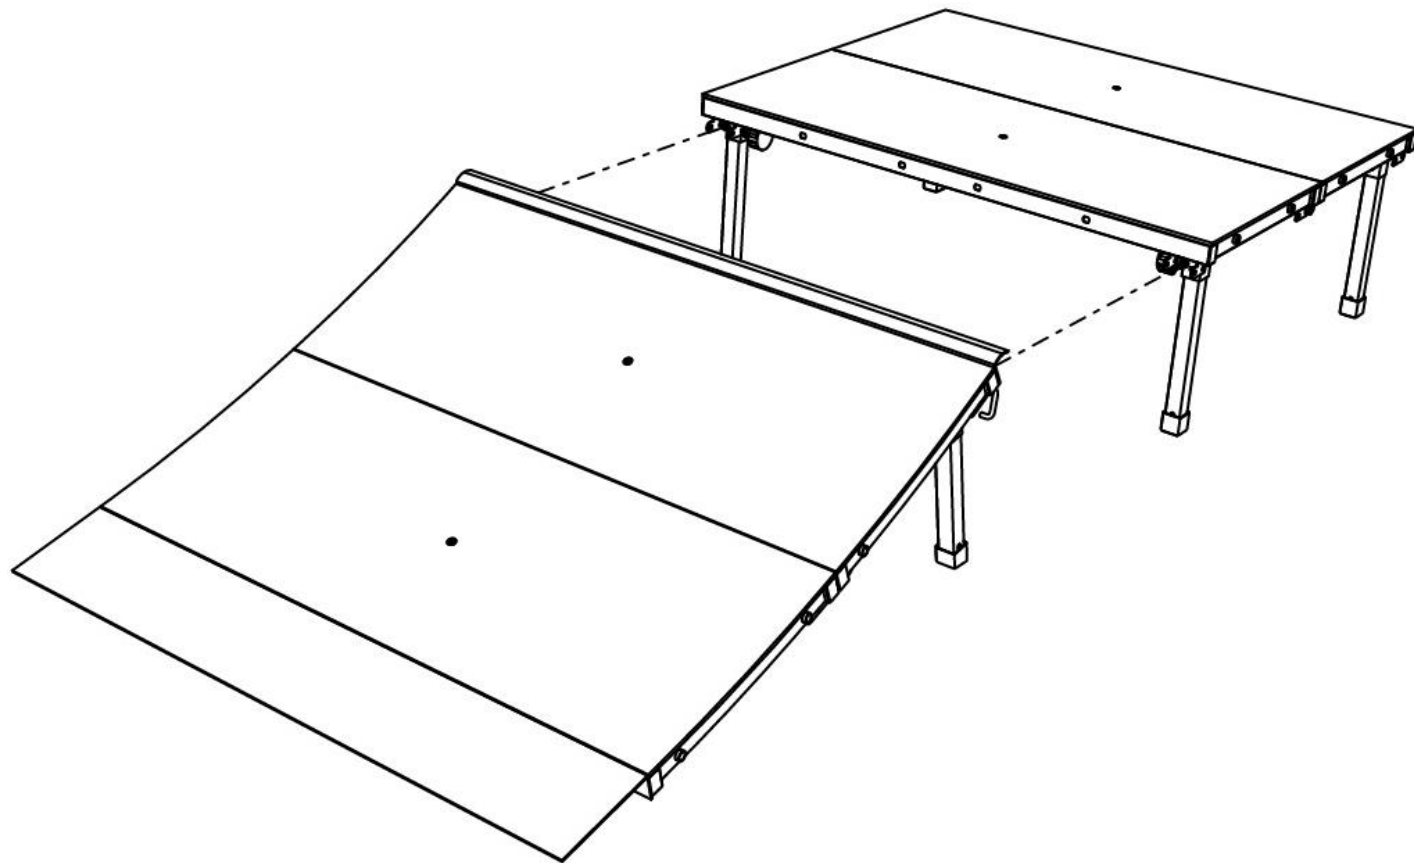


BOLTING RAMPS


STEP 2

Bolt the ramps together using J-bolts on both hinges

  Place a big washer on a J-bolt and slide it through both hinges and use a wing nut on the other side to tighten the ramps together

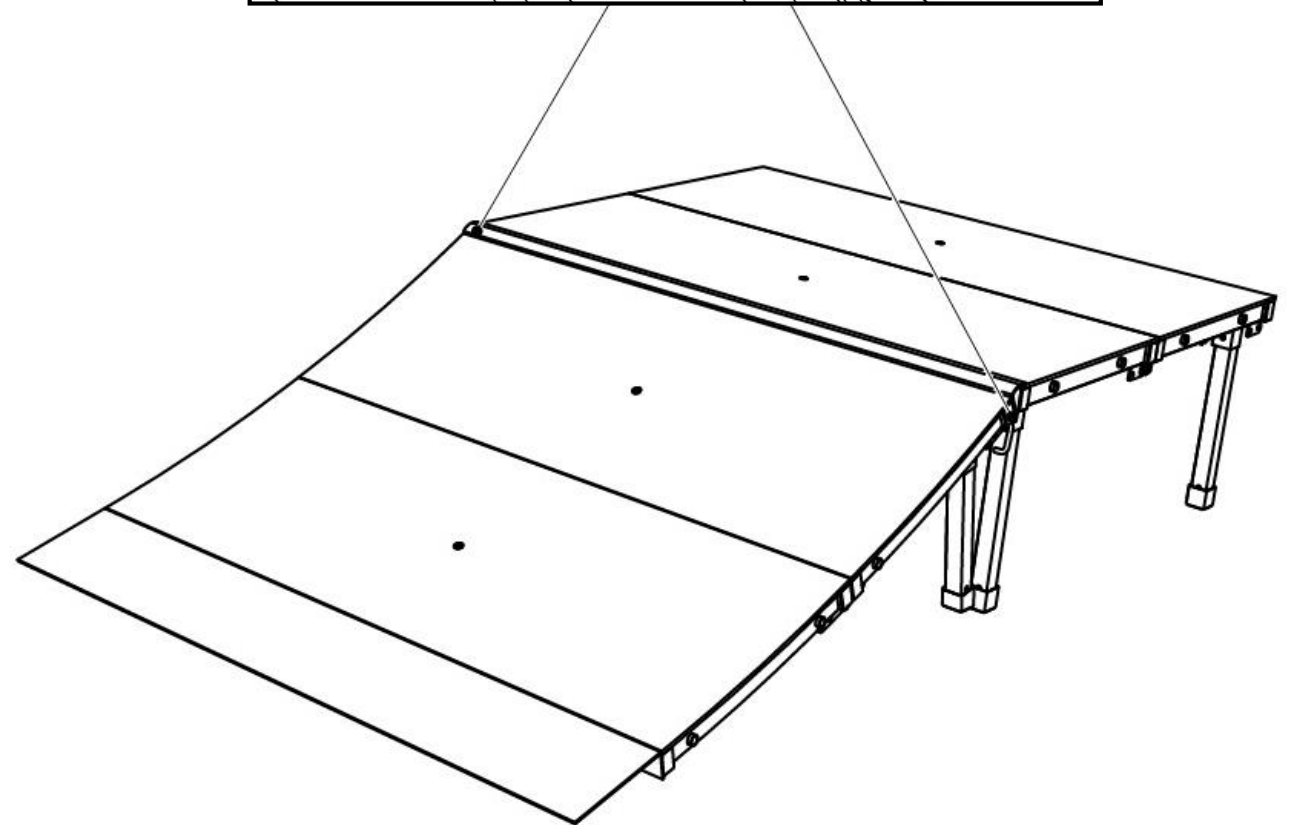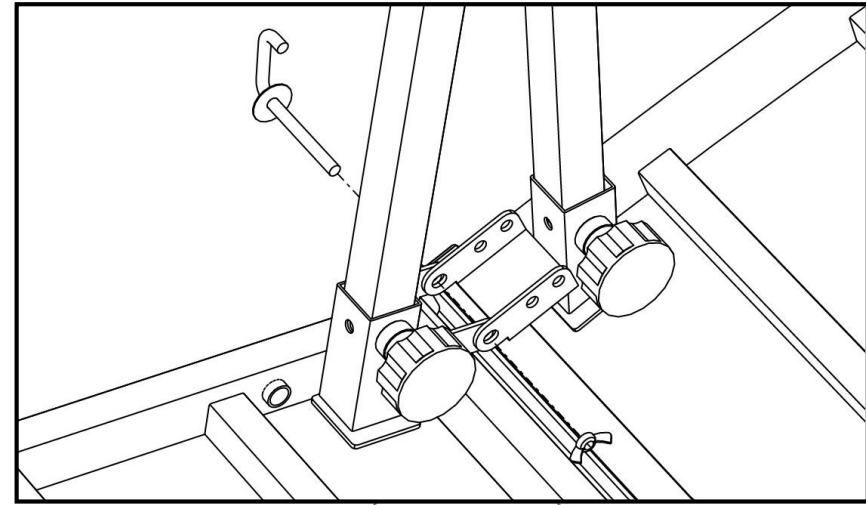

LAUNCH SPINE

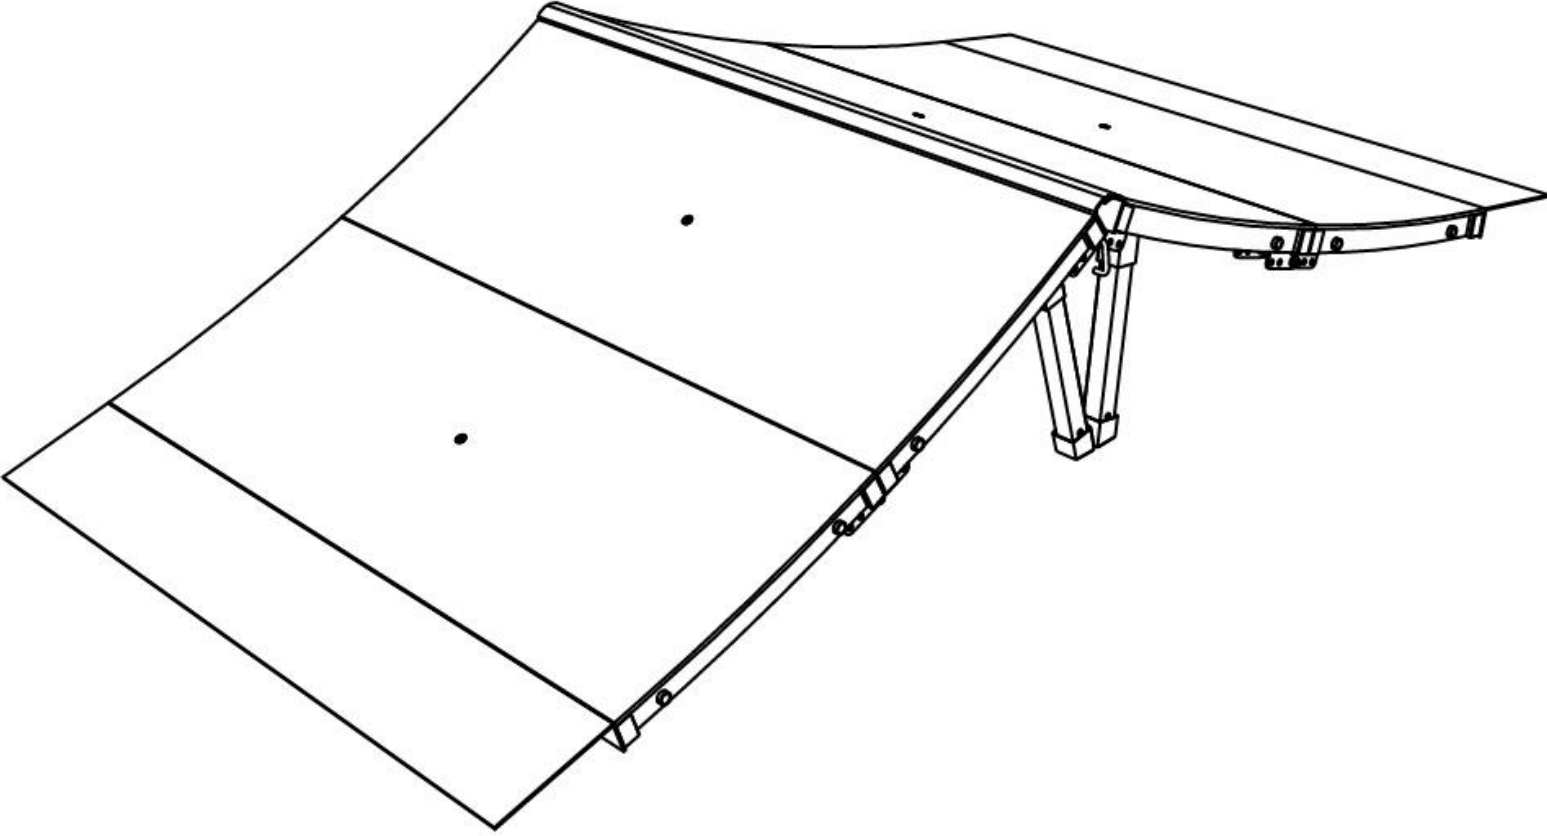 


ALIGNING RAMPS

STEP 1

Align the two launch ramps facing each other as shown

Bring them together so the hinges on each side meet

 Align the hinges so the sides of the ramp are flush with each other

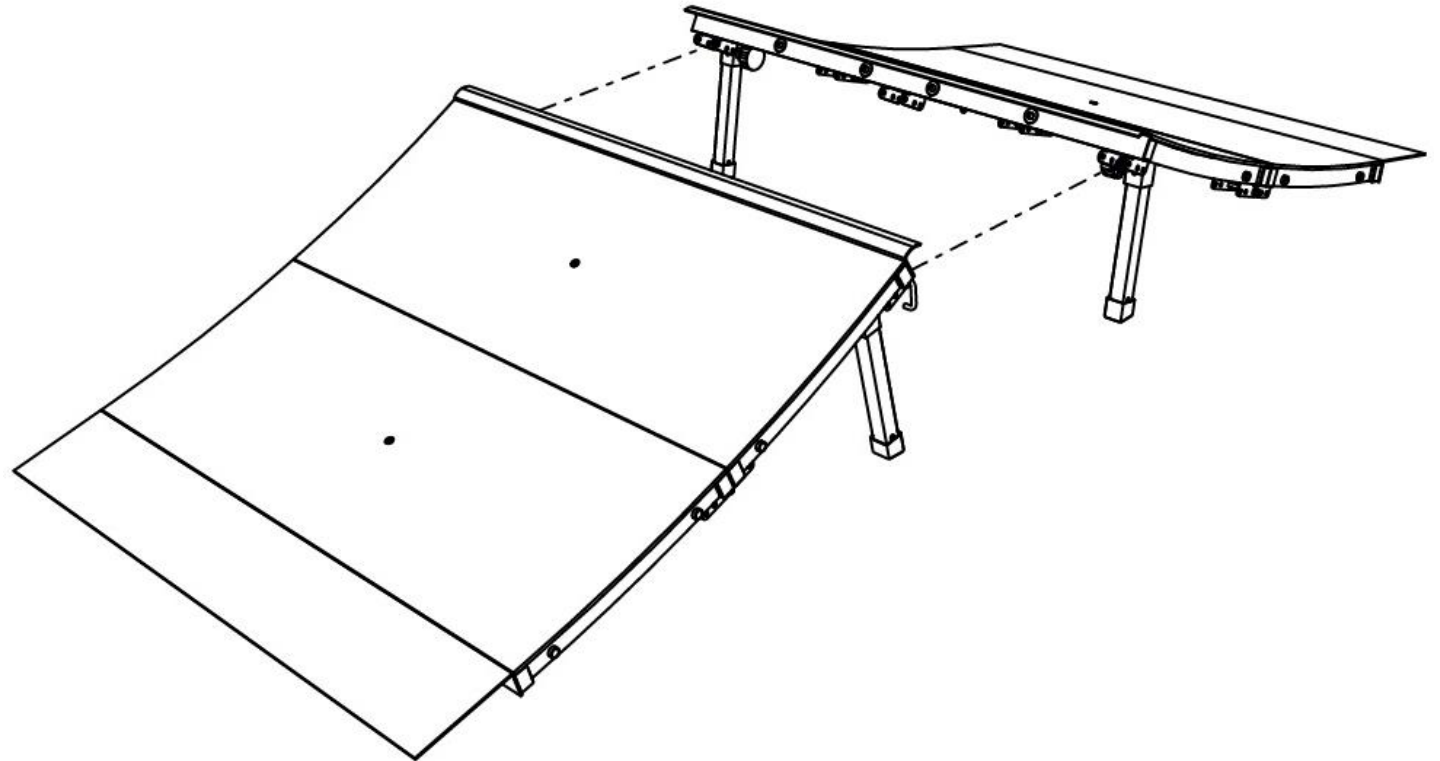


BOLTING RAMPS


STEP 2

Bolt the ramps together using J-bolts on both hinges

 Place a big washer on a J-bolt and slide it through both hinges and use a wing nut on the other side to tighten the ramps together

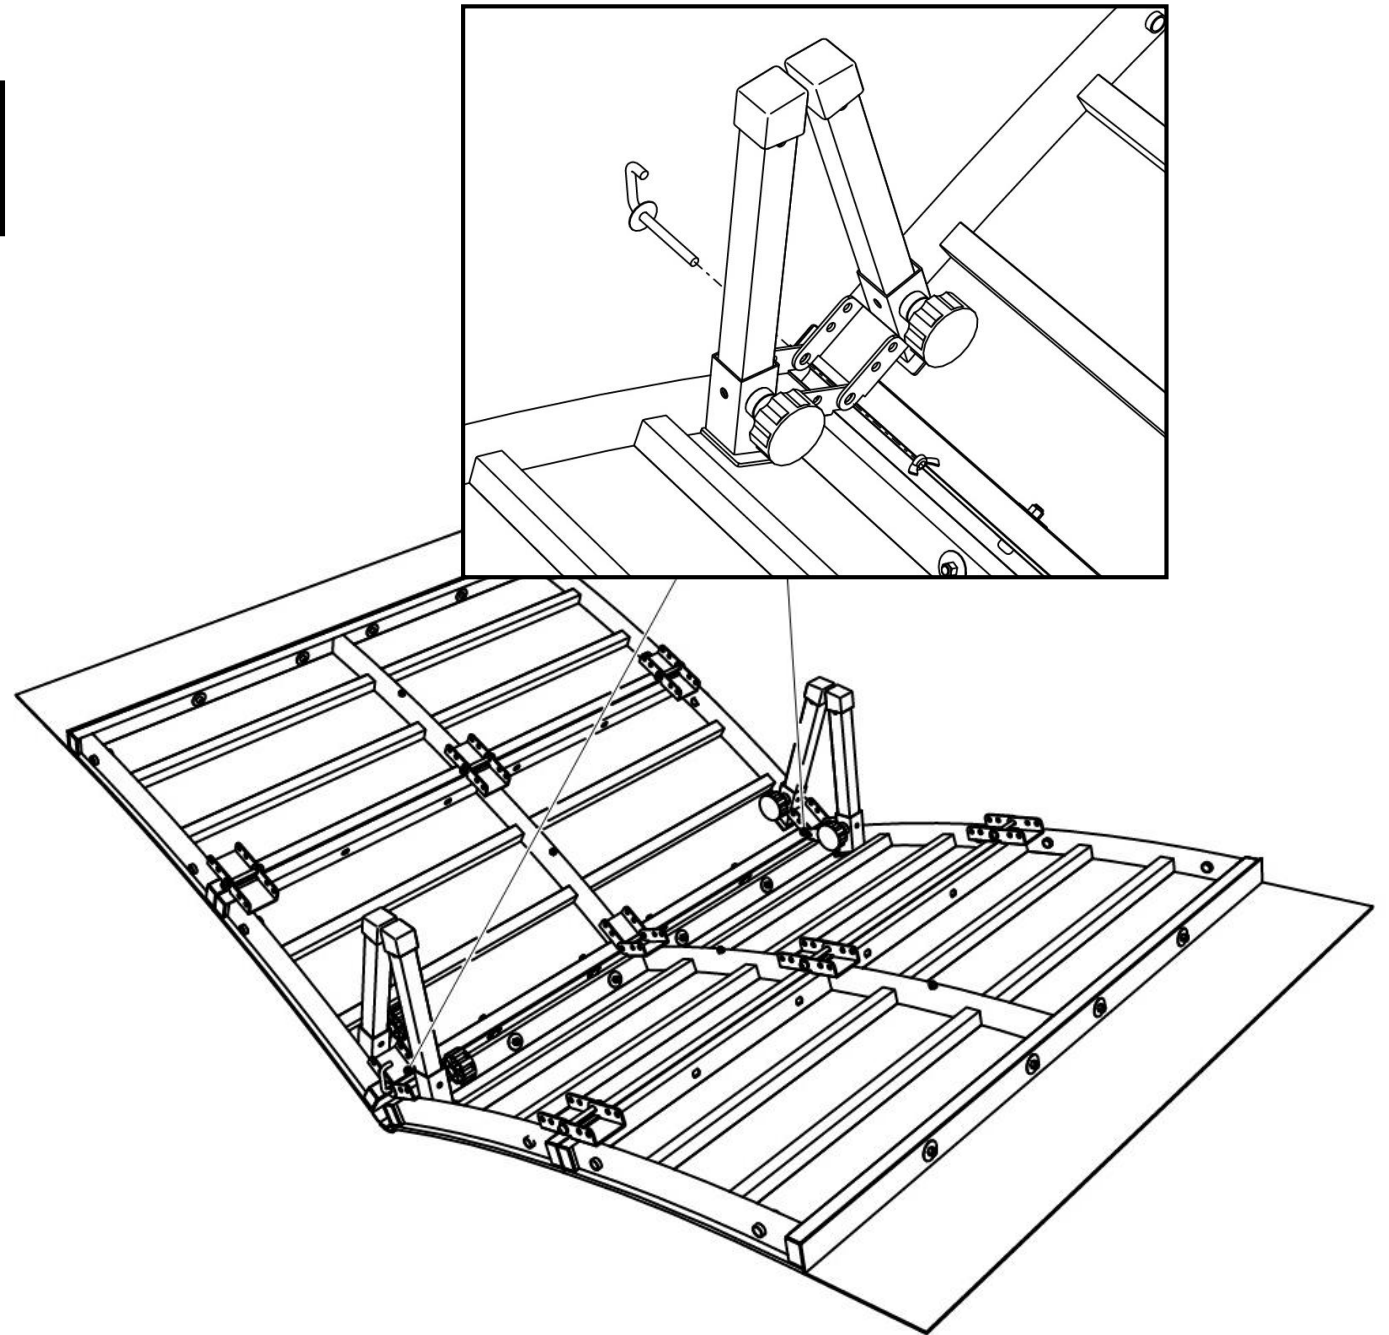

LINKING GRIND RAIL WITH LAUNCH RAMP

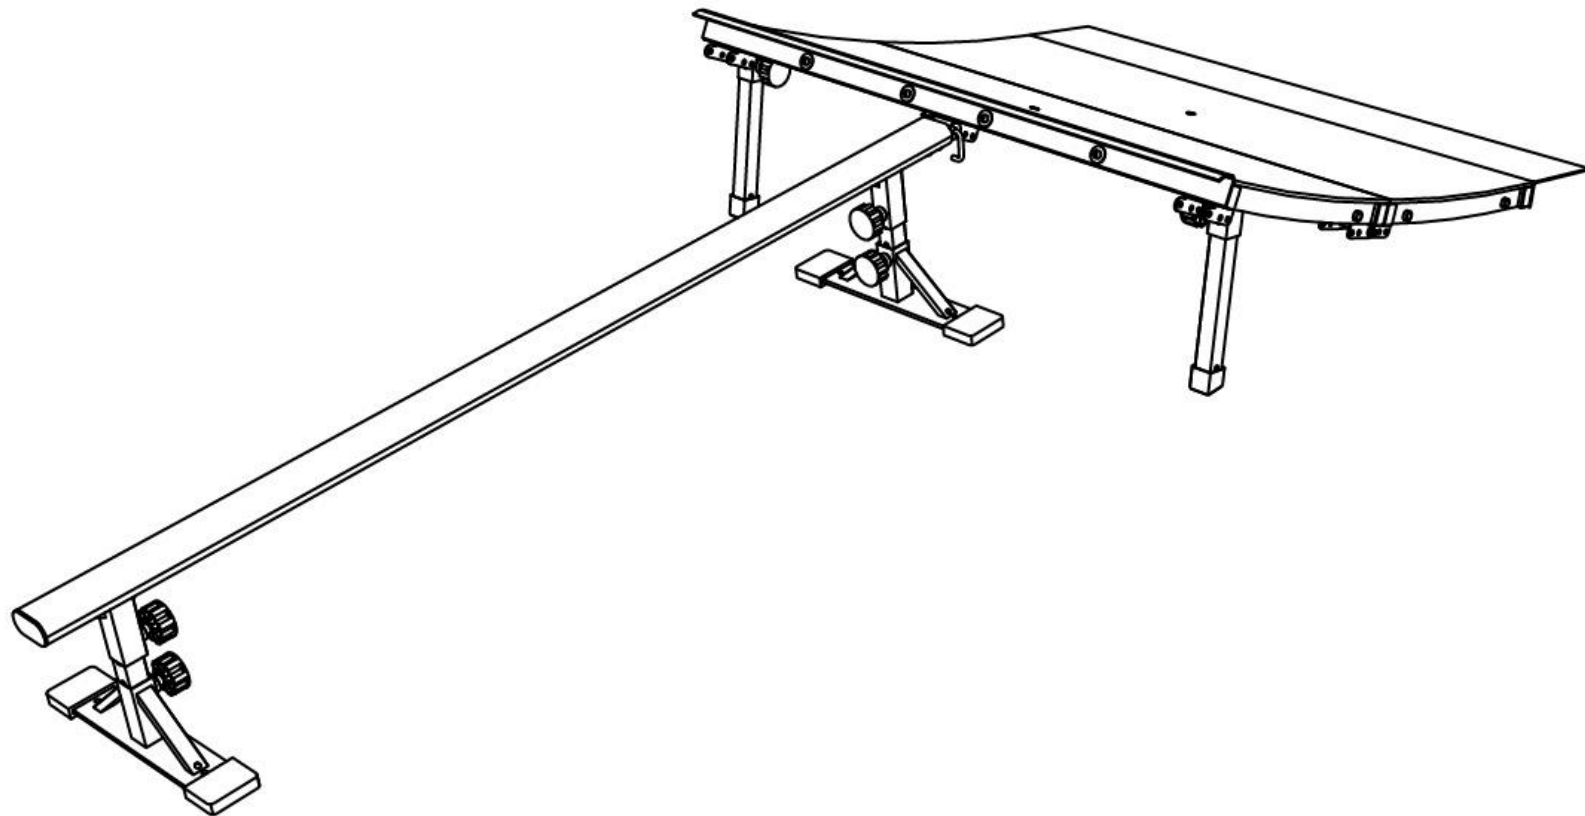 

ATTATCHING HINGE

STEP 1

 
Take an end cap off of each grind rail to expose the holes

Step 2


Insert the hinge into one of the grind rails

Align the first 2 holes in the hinge with the first 2 holes in the rail

STEP 1

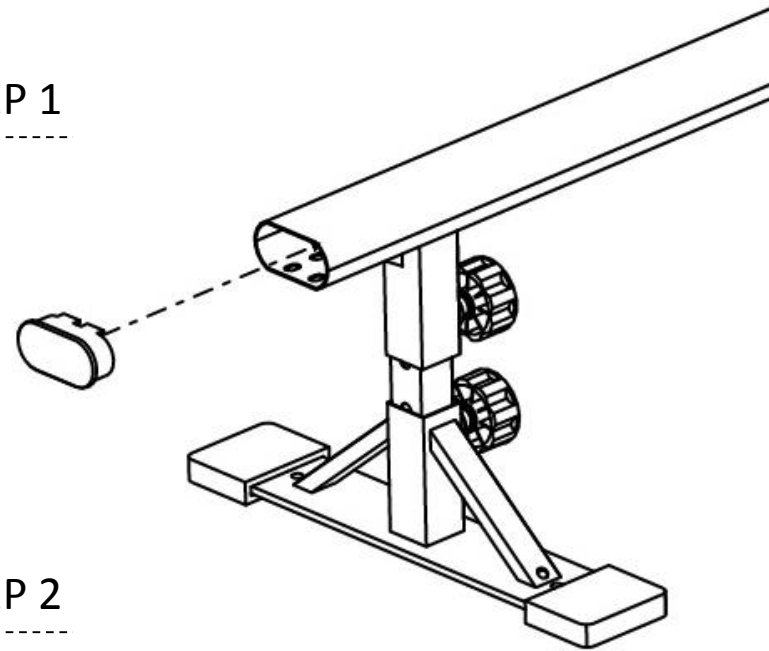

 STEP 2

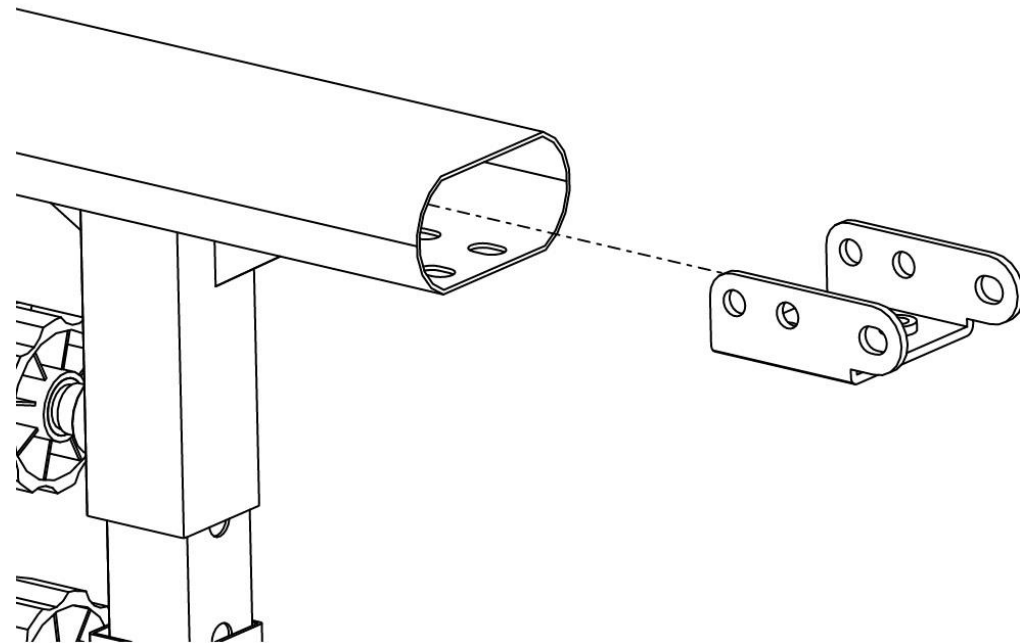


BOLTING HINGE

STEP 3

Bolt the hinge onto the rail at the first two holes with the washers and bolts provided

 Place a washer on each bolt and screw each one into the threads of the hinge

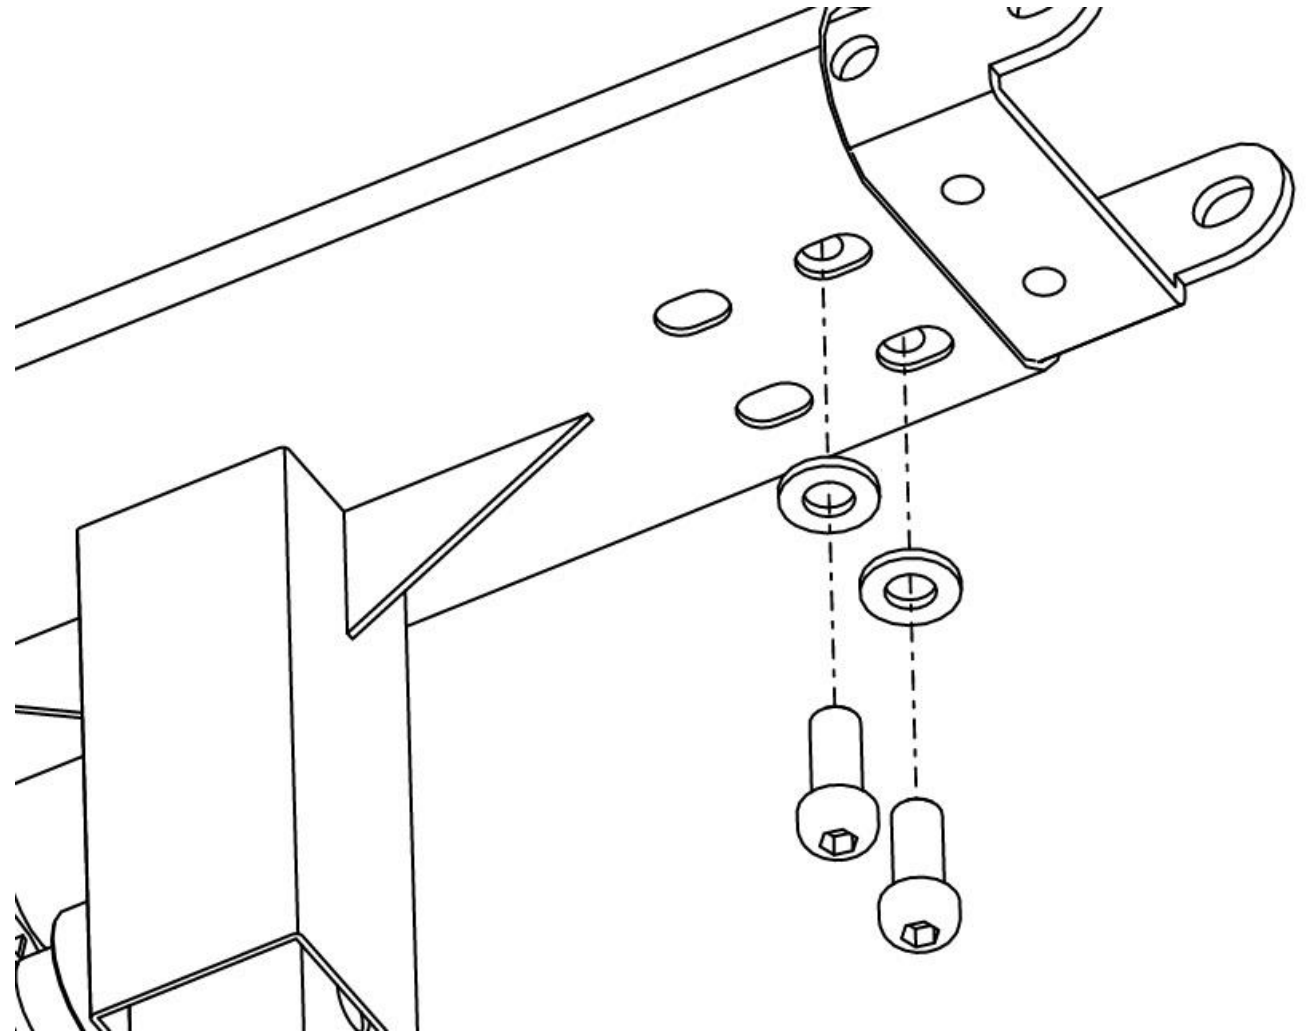

ALIGNING PIECES

 
STEP 4

Align the hinges together so the holes meet each other

Attach the grind rail to any hinge on the launch ramp

STEP 5

Place a big washer on a J-bolt and slide it through both hinges and follow it with a wing nut on the other side to tighten it to the launch ramp

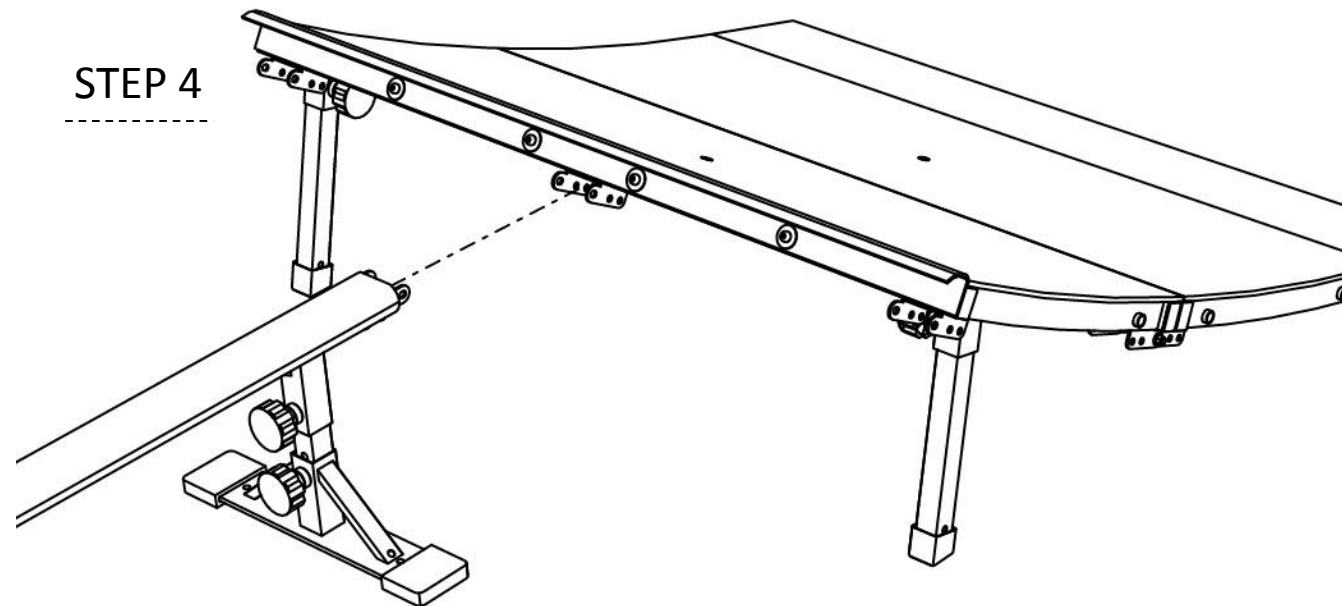

STEP 5

